



Congratulations for choosing Creative Green Life Insulated Grocery Bags! If you're like most customers, you'll quickly realize just how useful they are. To help you get the most out of your new bags, avoid these common mistakes:



1. For strength and stability, be sure the plastic insert is placed in the bottom of the bag after unfolding.
2. The more you fill the insulated cooler bag, the longer items will stay cold. It's best to use freezer packs if you only have a few cold items.
3. This bag is NOT waterproof. If using ice, be sure to place it inside a sealed container such as a gallon freezer bag.
4. Avoid sharp objects such as scissors and razor blades which may puncture or slice the fabric.